

# **VIGIL**

## ANPR Utility 11.6

**Automatic Number (License) Plate Recognition Software**  
User Guide

VIGIL Copyright ©2021 3xLOGIC, Inc. All rights reserved.

**3xLOGIC Inc.**

11899 Exit 5 Parkway, Suite 100

Fishers, IN 46037

United States. (303) 430-1969

***Disclaimer***

Information in this document is subject to change without notice and does not represent a commitment on the part of 3xLOGIC Inc. The software and/or databases described in this document are furnished under a license agreement or nondisclosure agreement. They may be used or copied only in accordance with the terms of the agreement. It is against the law to copy the software on any medium except as specifically allowed in the license or nondisclosure agreement. The purchaser may make one copy of the software for backup purposes. No part of this manual and/or databases may be reproduced or transmitted in any form or by any means, electronic or mechanical, including (but not limited to) photocopying, recording, or information storage and retrieval systems, for any purpose other than the purchaser's personal use, without the express written permission of 3xLOGIC Inc.

3xLOGIC, VIGIL and AZTECH are trademarks of 3xLOGIC, Inc.

Other trademarks and trade names may be used in this document to refer to either the entities claiming the marks and names or their products. 3xLOGIC Inc. disclaim any proprietary interest in trademarks and trade names other than their own.

# Table of Contents

<b>1 Introduction</b> .....	<b>1</b>
<b>1.1 Features</b> .....	<b>1</b>
<b>2 VIGIL ANPR Utility</b> .....	<b>2</b>
<b>2.1 Installation</b> .....	<b>2</b>
<b>2.2 Main Interface</b> .....	<b>2</b>
<b>3 Settings</b> .....	<b>3</b>
<b>3.1 License Plate Settings</b> .....	<b>3</b>
<b>3.2 VIGIL Server Settings</b> .....	<b>4</b>
<b>3.3 Camera Settings</b> .....	<b>5</b>
<b>3.4 Standalone Camera Settings</b> .....	<b>6</b>
<b>3.5 Email Settings</b> .....	<b>7</b>
<b>3.6 License List Settings</b> .....	<b>8</b>
3.6.1 Add / Edit License List .....	8
<b>3.7 Export Settings</b> .....	<b>10</b>
<b>3.8 Miscellaneous Settings</b> .....	<b>11</b>
<b>3.9 Registration Settings</b> .....	<b>12</b>
<b>4 Alarms</b> .....	<b>13</b>
<b>5 Search</b> .....	<b>14</b>
<b>6 Thumbnails</b> .....	<b>15</b>
<b>7 VIGIL ANPR Utility - Successful Application - Example</b> .....	<b>16</b>
<b>8 Integration with VIGIL Server and Client</b> .....	<b>17</b>
<b>8.1 Utilizing VIGIL Alarms/Relays</b> .....	<b>17</b>
8.1.1 Configuring AUX Device Settings in VIGIL Server .....	18
8.1.2 Configuring Relay Settings in VIGIL ANPR Utility .....	19
8.1.3 Configuring Relay Settings in VIGIL Server .....	20
<b>8.2 Configuring VIGIL Server POS OSD to Display ANPR Data</b> .....	<b>21</b>

8.2.1 Enabling Data Insertion Into the VIGIL Server Database .....	21
8.2.2 Configuring OSD Settings in VIGIL Server .....	22
8.2.3 Viewing ANPR Data OSD .....	23
<b>9 Version Control .....</b>	<b>24</b>
<b>10 Contact Information .....</b>	<b>25</b>

## 1 Introduction

3xLOGIC's VIGIL ANPR (Automatic Number Plate Recognition) Utility is an easy-to-use traffic enforcement solution featuring full integration with 3xLOGIC's cutting-edge VIGIL VMS software. VIGIL ANPR offers your clients, customers and employees another layer of protection in traditionally low-security environments such as parking lots, garages, and toll roads.

Coupled with the added benefit of the VIGIL VMS's ease-of-use, scalability and high-resolution footage management capabilities, the VIGIL ANPR's ability to capture and record license plates provides VIGIL with a new layer of functionality; yet another multi-point solution added to the VIGIL surveillance family.

This user guide is current as of VIGIL ANPR v11.60.0000

### 1.1 Features

A brief summary of features is listed below:

- **VIGIL Integration** - The VIGIL ANPR Utility features full integration with the VIGIL family of surveillance products and can be utilized in conjunction with VIGIL Client or other VIGIL mobile products for any number of field applications and environments.
- **License Plate Hot Lists** - Compile lists of known license plates numbers. When a number on the list is encountered, the utility can be configured to trigger an alarm or relay in Server. This feature can be used to quickly identify stolen vehicles or known high-risk offenders, or to automatically permit access (using DIOs in conjunction with VIGIL Server) to gated communities, parking garages, etc.
- **Auto List Import** - Automatically import license plate hot lists from a custom destination (csv or txt format).
- **Import/Export Utility Settings, License Plate Hot Lists** - Import and Export of Utility Settings and License Plate Hot List is fully supported. Import settings to a new instance of the ANPR Utility
- **Export XML data to Custom External Destination** - Plate data can be exported to a custom destination for review or archiving separate of the VIGIL Server database.
- **Built-in Search Functionality via VIGIL Server Integration** - The VIGIL ANPR Utility features search functionality for recorded data via integration with VIGIL Server. Quickly search and locate plates of interest.
- **Multiple VIGIL Server Support** - Capture plate data from several cameras across multiple VIGIL Servers.
- **ANPR Camera Support** - The utility has the ability to interface with certain ANPR cameras that capture and process plates on-board, greatly reducing CPU usage on your VIGIL ANPR system. Plate data is then passed along to the utility and inserted into the database.

## 2 VIGIL ANPR Utility


### 2.1 Installation

After acquiring the install file for the VIGIL ANPR Utility:

1. Run the file to begin the installation process.
2. Follow the on-screen instructions to complete the installations process.
3. After the install is complete, navigate to *Start> All Programs> VIGIL* and select VIGIL ANPR to run the utility.

### 2.2 Main Interface

After opening the VIGIL ANPR Utility, you will be presented with the VIGIL ANPR Utility main screen window (pictured below.)

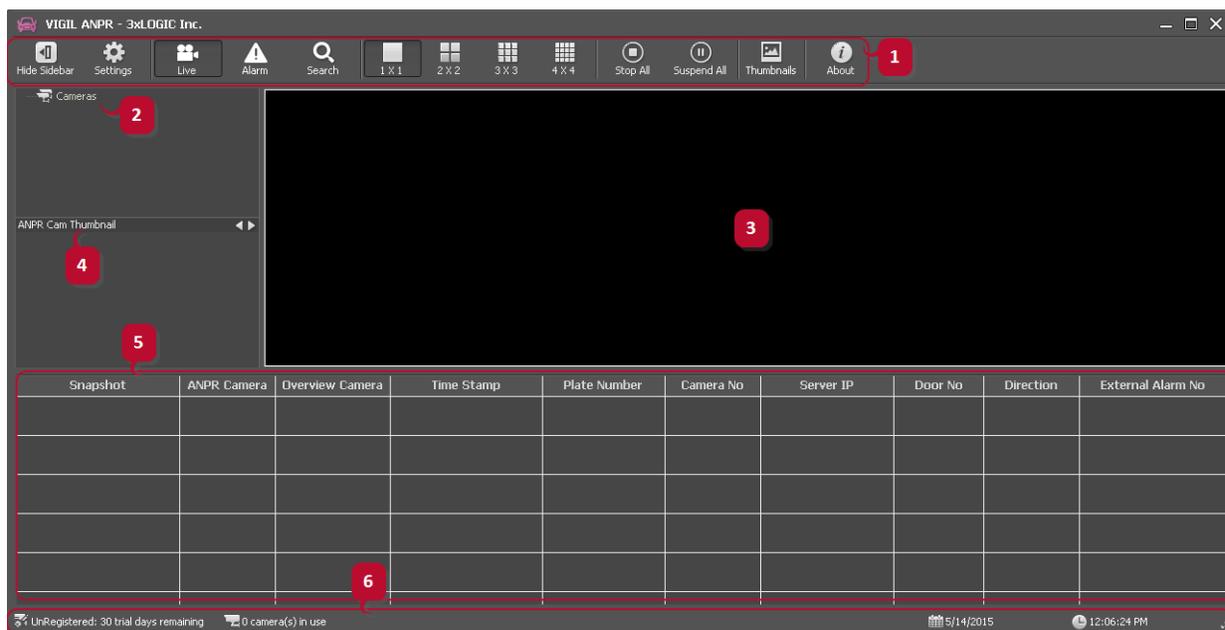

**Figure 2-1:**VIGIL ANPR Utility - Main Screen

1. **Icon Menu Toolbar** – From the icon menu toolbar, a user may hide/show the camera list *Sidebar*, access the VIGIL ANPR Utility *Settings*, access the *Alarms* window, access the plate *Search* function, adjust live view layouts, open the thumbnail browser, Stop/Start/Suspend live view controls and access the *About* window.
2. **Camera List** – This section is a list of cameras that have been configured in the VIGIL ANPR Utility. Add Cameras in *Settings>Camera Settings*. The list can be opened and closed by clicking the *Hide/Show Sidebar* button.
3. **Live Viewer** – A live view of cameras currently configured in the VIGIL ANPR Utility. Live view layout may be changed by selecting a different pre-configured layout from the icon menu toolbar.
4. **ANPR Camera Thumbnail Preview** - A thumbnail preview image of the latest number plate to be recorded by the selected VIGIL ANPR Utility will be displayed in this area.
5. **ANPR Event List** – If any plate numbers have been captured, each individual plate will be listed here with supporting information. This list holds a maximum of 50 entries.
6. **Information Bar** – Information regarding the ANPR utility will be listed here. Information includes Registration Info, Number of Cameras in use, Date and Time.

## 3 Settings

VIGIL ANPR Utility has several settings which can be customized to best suit the environment in which it is being deployed.



Click the  button to open the *Settings* window. The [License Plate Settings](#) will be the active tab by default.

### 3.1 License Plate Settings

Pictured below is the *License Plate Settings* tab.




**Figure 3-1:**VIGIL ANPR Utility - Settings - License Plate Settings Tab

1. **Select Country and Weights** – Select applicable countries and configure their individual weights. Each Country has different number plate styles and dimensions. Selecting the proper countries will greatly improve ANPR accuracy. A country's weight value is the expected percentage of encountered plates that will belong to the corresponding country. 0.7 would set the expectancy rate (how many visible number plates are expected to be from the chosen country) to 70%. The default value is 0.7. 3xLOGIC recommends using the default value.
2. **Minimum Number of License Characters** – Sets the minimum amount of numbers that should appear on number plates in this particular application of the ANPR Utility. Plates with less than the defined value will not be recorded.
3. **Maximum Number of License Characters** – Sets the maximum total amount of numbers that should appear on number plates in this particular application of the ANPR Utility. Plates with more than the defined value will not be recorded.
4. **Min Confidence of Single Plate Character** – Sets the *Minimum Confidence Value for Single Plate Character* value. With higher confidence values, plate reporting will be less frequent, but with a much higher chance of accuracy. Lower confidence will boost the amount of recorded plates, but the inaccuracy will also increase. This confidence setting presides over single characters on a recorded plate.
5. **Min Confidence of All Plate Character** – Sets the *Minimum Confidence Value for All Plate Characters* value. With higher confidence values, plate reporting will be less frequent, but with a much higher chance of accuracy. Lower confidence will boost the amount of recorded plates, but the inaccuracy will also increase. This confidence setting presides over entire number plates.
6. **Import/Export License Plate Settings** – Import or Export an XML file to use/save a previously configured set of license plate settings.

## 3.2 VIGIL Server Settings

Pictured below is the *VIGIL Server Settings* tab.

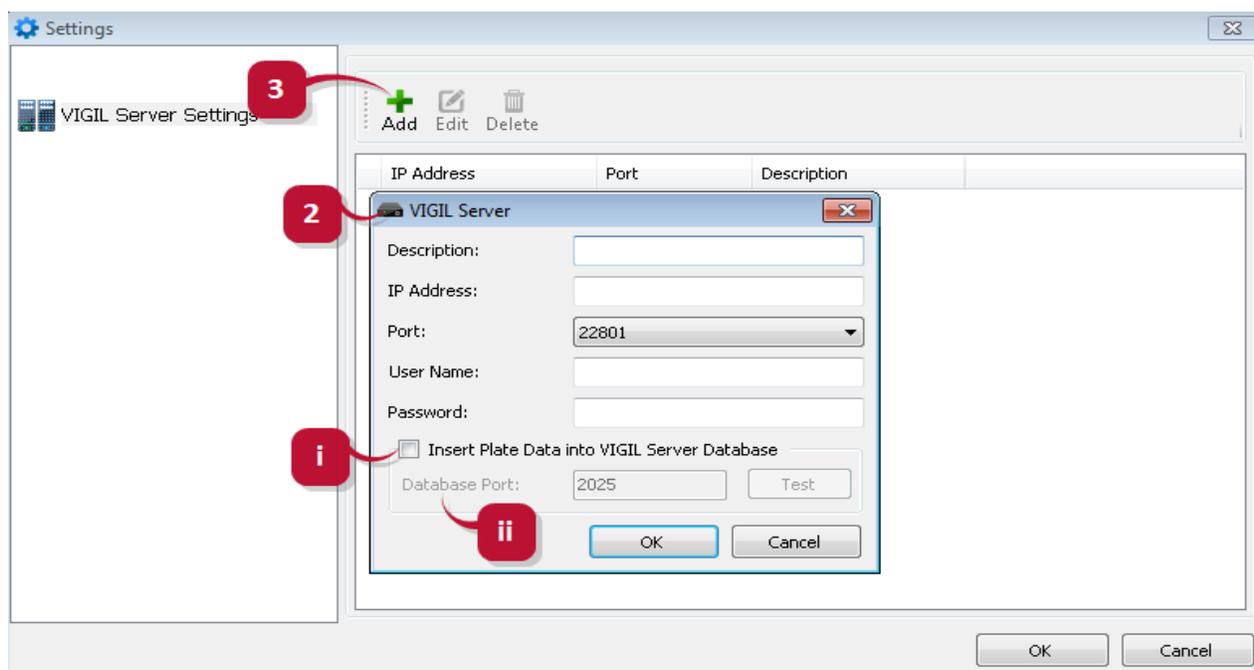

**Figure 3-2:**VIGIL ANPR Utility - Settings- VIGIL Server Settings Tab

1. **Add/Edit/Delete** – *Add, Edit* or *Delete* a VIGIL Server DVR.
2. **Add/Edit VIGIL Server Window** – If you choose to Add or Edit a VIGIL Server DVR, the Add/Edit VIGIL Server window will open. Enter the appropriate information to add a VIGIL Server to the VIGIL ANPR Utility's list of VIGIL Server's.
  - **Insert Plate Data into VIGIL Server Database** - Insert recorded plate data into the VIGIL database. This function essentially links this instance of the ANPR utility with VIGIL Server, enabling searching for plate data via VIGIL Software(Client, Server, etc...). On-screen display of plate data is dependent on this setting as it is managed through the VIGIL Server database.
  - **Database Port** - Input the correct port number for the desired VIGIL Server's database. Click the *Test* button to confirm port validity.

### 3.3 Camera Settings

Pictured below is the *Camera Settings* tab.


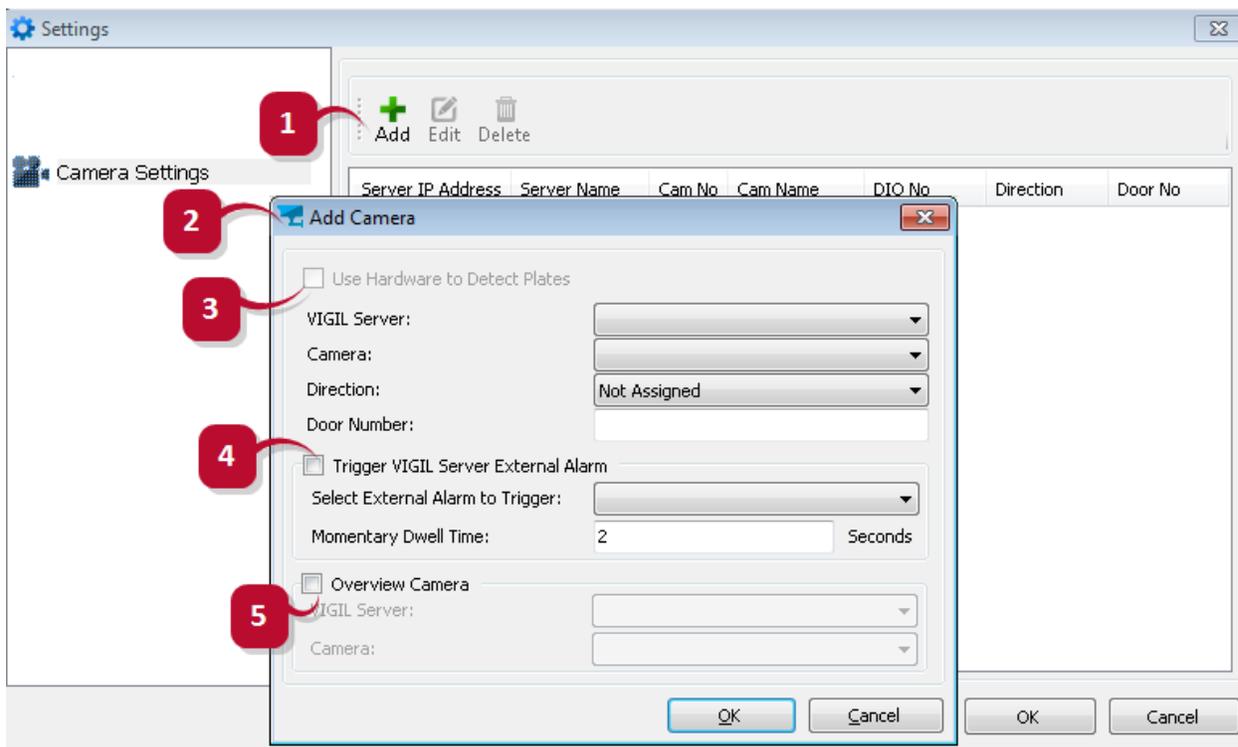


Figure 3-3: VIGIL ANPR Utility - Settings - Camera Settings Tab

1. **Add/Edit/Delete** – Add, Edit or Delete an ANPR camera.
2. **Add/Edit Camera Window** – Configure your desired settings and click OK to add the camera to the VIGIL ANPR Utility.
3. **Use Hardware to Detect Plates** - Enable this option if the camera you are adding has on-board ANPR capabilities. ANPR processing will be performed on-board the camera, reducing CPU load for the system you have installed VIGIL ANPR on. Contact 3xLOGIC Support for a list of supported ANPR Cameras.
4. **Trigger VIGIL Server External Alarm** - Select this option to trigger an external alarm whenever this camera captures a plate number.
  - **Select External Alarm to Trigger** - Select the External Alarm to trigger in VIGIL Server.
  - **Momentary Dwell Time** - Select the alarm dwell time (the amount of time the alarm will remain active after being triggered.)
5. **Overview Camera** - Choose an overview camera. In most applications, this camera will be pointing in the same direction as your ANPR camera but with a larger field-of-vision. This method can be utilized to provide users with a full image of the area surrounding the ANPR camera's field-of-vision.
  - **VIGIL Server** - Select the desired Overview Camera's host VIGIL Server.
  - **Camera** - Select the VIGIL Server camera channel associated with your desired Overview Camera.

## 3.4 Standalone Camera Settings

Pictured below is the *Standalone Camera Settings* tab.

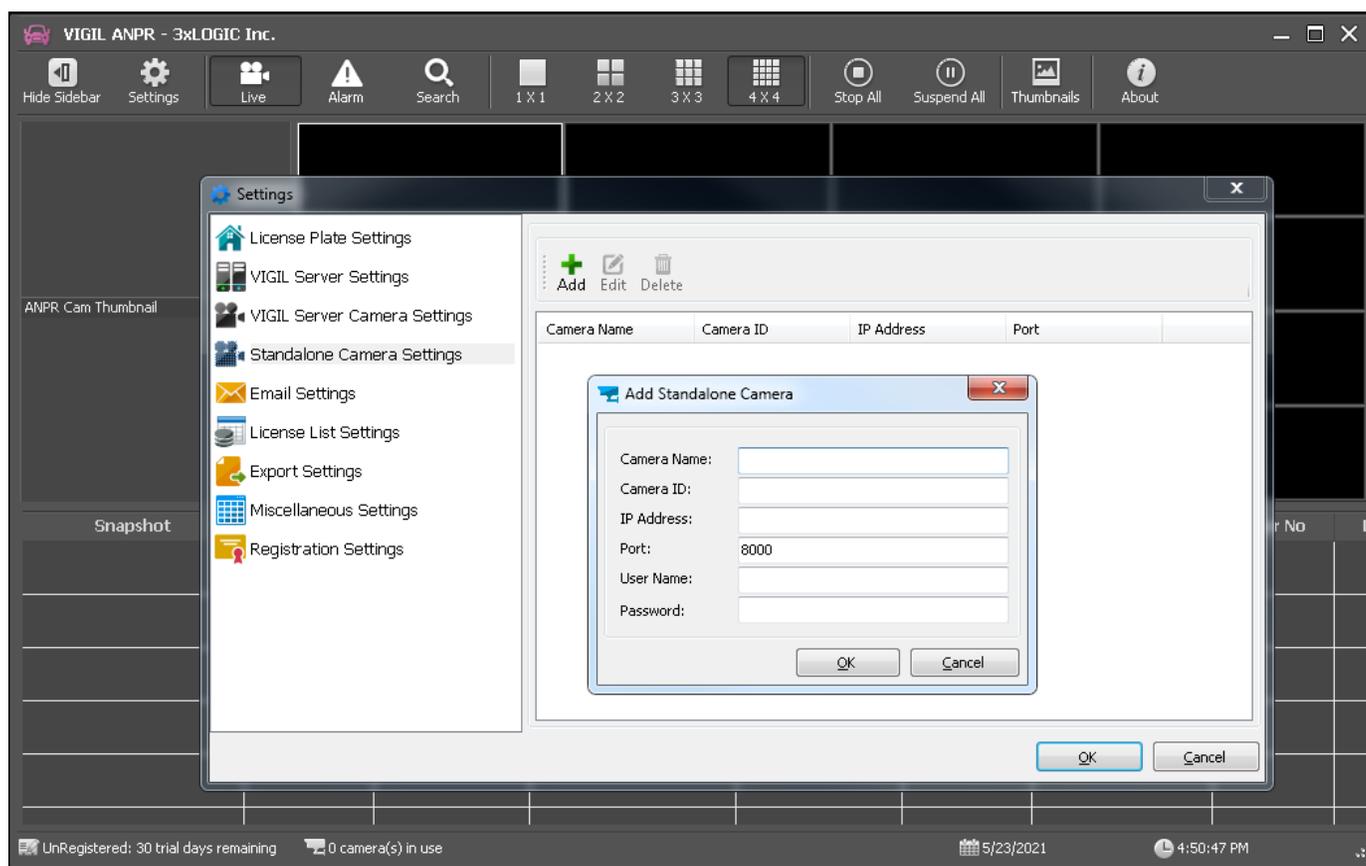

**Figure 3-4:**Standalone Camera Settings

1. **Add/Edit/Delete** – Add, Edit or Delete a standalone ANPR camera.
2. **Add/Edit Camera Window** – Configure your desired settings and click *OK* to add the camera to the VIGIL ANPR Utility. *Camera Name*, *ID*, *IP Address*, *Port* and login credentials must be included. Click *OK* to save the new standalone camera.

## 3.5 Email Settings

Pictured below is the *Email Settings* tab.

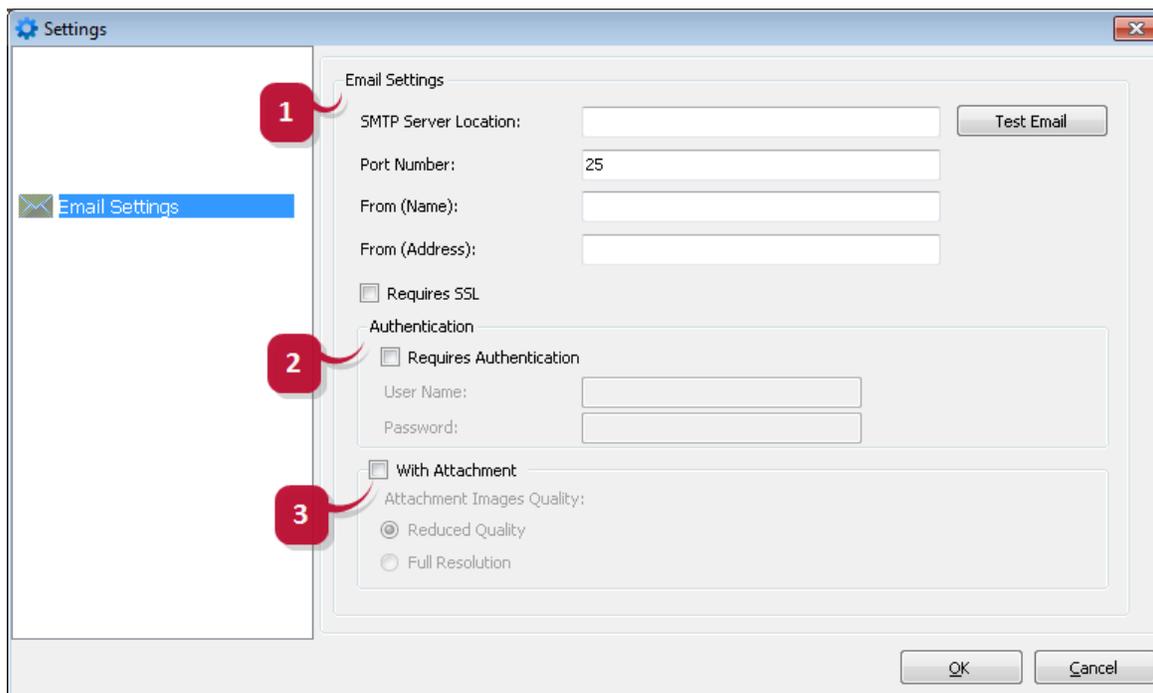


Figure 3-5: VIGIL ANPR Utility - Settings - Email Settings Tab

1. **Email Settings** - Configure email settings in this section. Email notifications can be enabled on the [License List Settings](#) tab.
  - **SMTP Server Location** - Define the location of your emails SMTP server.
  - **Port Number** - Define the port number associated with the emails SMTP Server.
  - **From(Name)** - The email's From name.
  - **From(Address)** - The email address
  - **Requires SSL** - Enable this box of this account requires SSL.
2. **Authentication** - If the configured email requires authentication, the information can be entered here.
  - **Requires Authentication** - Check this box to indicate the above configured email address requires authentication.
  - **Username/Password** - Enter the email accounts login credentials.
3. **With Attachment** - Enable this option to include an image of the associated event in your notification email.
  - **Reduced Quality** - Select this option to attach a reduced quality image to your notification emails.
  - **Full Resolution** - Select this option to attach a full resolution image to your notification emails.

## 3.6 License List Settings

VIGIL ANPR Utility allows the user to compile lists of known license plates numbers. When a number on the list is encountered, the utility can be configured to trigger an alarm or relay in Server or send an email notification to a recipient(s) of your choosing. This feature can be used to quickly identify stolen vehicles or known high-risk offenders, or to automatically permit access (using DIOs in conjunction with VIGIL Server) to gated communities, parking garages, etc.

The *License List Settings* tab is pictured below.

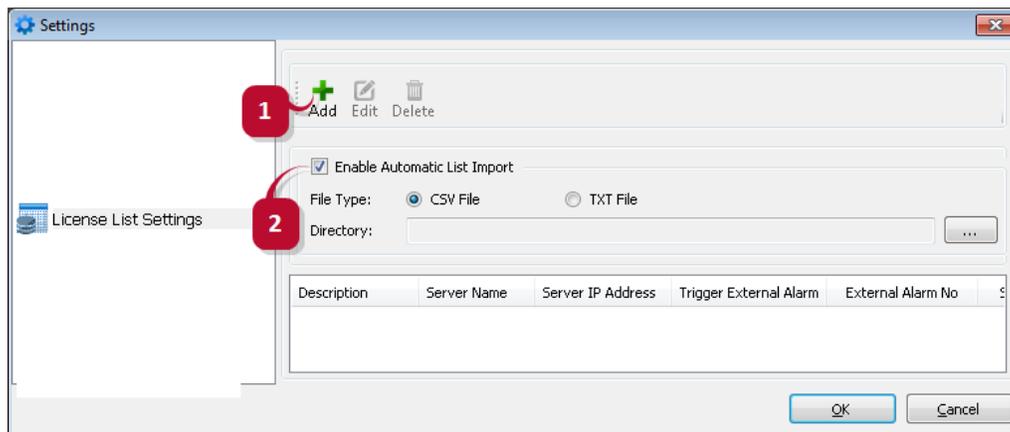


Figure 3-6: VIGIL ANPR Utility - Settings - License List Settings Tab

1. **Add/Edit/Delete a License List** - Add, Edit, or Delete a license plate hot list.
2. **Enable Automatic List Import** -
  - **File Type** - Select the auto-import file type. Available file types include .csv or .txt.
  - **Directory** - Click the ... button to select the location of the auto-import file. VIGIL ANPR will poll his location for an updated file

### 3.6.1 Add / Edit License List

When adding or editing a license list, the following window will deploy.


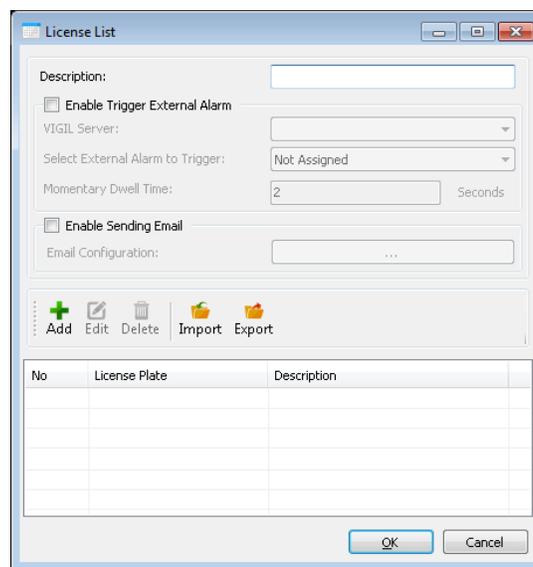


Figure 3-7: License List Settings - Add / Edit License List Window

1. **Description** - Name the list so it can be quickly identified.
2. **Enable Trigger External Alarm**
  - **VIGIL Server** - Select the VIGIL Server to trigger the alarm on. VIGIL Servers can be added in the [VIGIL Server Settings window](#).
  - **Select External Alarm to Trigger** - Select the External Alarm to trigger in the chosen VIGIL Server.
  - **Momentary Dwell Time** - Set the dwell time for the alarm(length of alarm after being triggered)
3. **Enable Sending Email** - Enable Email Notifications for this list. When enabled, VIGIL will email a user when a number on the hot list is recorded.
  - **Email Configuration** - Opens the E-mail Configuration window.
4. **Add/Edit/Delete License Plate Number** - Add, Edit or Delete a license plate number to the license plate hot list. A description can be included with the plate number.
5. **Import/Export License Plate Numbers** - Import pre-configured license plate numbers from an excel or text file (.xlsx, .txt).

## 3.7 Export Settings

Pictured below is the *Export Settings* tab.

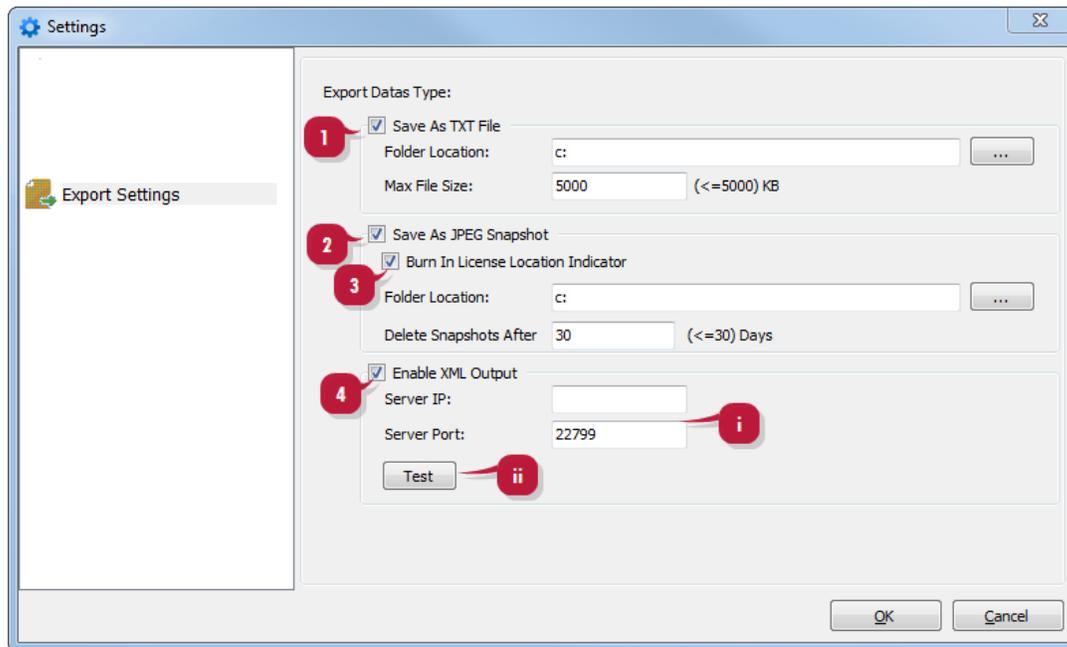

1. **Save as TXT File** – Save plate data in .txt format. Select a folder to save the text files in by clicking the ... button next to the *Folder Location* field.
2. **Save as JPEG Snapshot** – Save JPEG Snapshots of footage frames featuring recorded snapshots. Select a folder to save the snapshot files in by clicking the ... button next to the *Folder Location* field. Set a *Delete Snapshots After* value which is less than or equal to 30 days.
3. **Burn In License Location Indicator** - Highlights the location of the captured plate in the JPEG snapshot by surrounding the plate in a red rectangle(pictured below.)



**Figure 3-8:**Burn in License Location Indicator - Location Indicator Example

4. **Enable XML Output** – Enable this feature to output plate data in XML format to a specific IP Address and Port for integration with third party software.
  - **Server IP/Port** – Enter the IP and Port number of the entity which will receive the XML data.
  - **Test** – Test the connection between the VIGIL ANPR utility and the configured entity.

## 3.8 Miscellaneous Settings

Pictured below is the *Miscellaneous Settings* tab. From this tab, a user may configure column ordering and visibility for the main screen's event list.


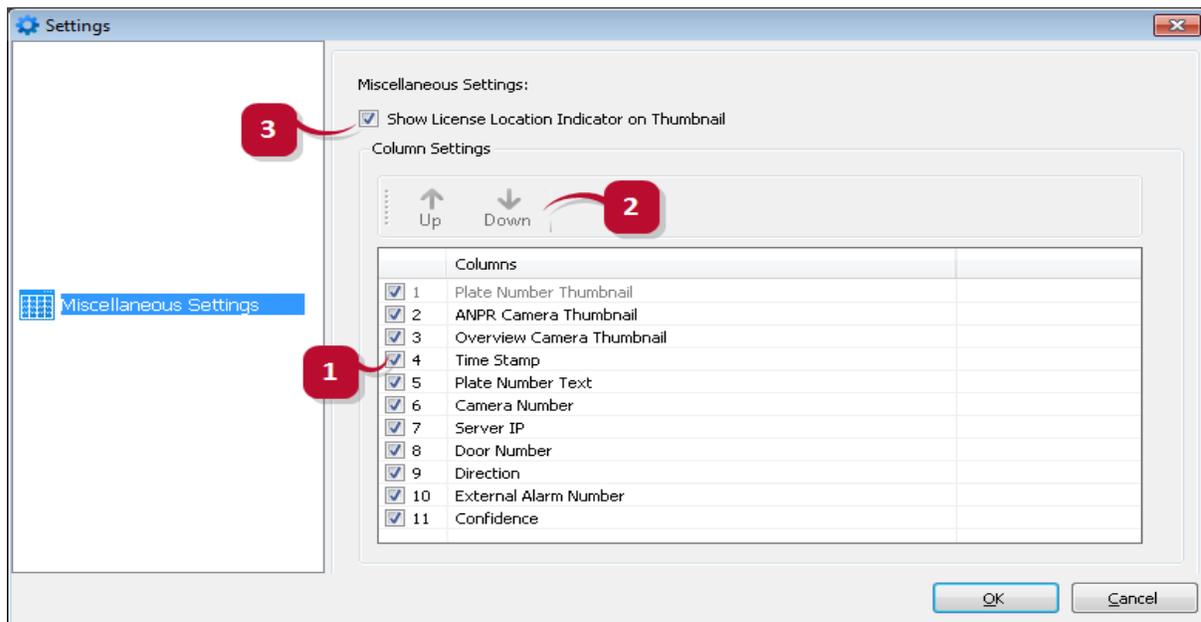


Figure 3-9: VIGIL ANPR Utility - Settings - Miscellaneous Settings Tab

1. **ANPR Event Column** - Check off a column to enable or disable column visibility.
2. **Up/Down** - When a column is selected in the list, use the *Up/Down* controls to adjust column order.
3. **Show License Location Indicator on Thumbnail** - Enable this option to show the license location indicator on thumbnails. After a plate is captured, the portion of the image that the plate was captured from will be highlighted on the thumbnail.

### 3.9 Registration Settings

Pictured below is the *Registration Settings* tab.

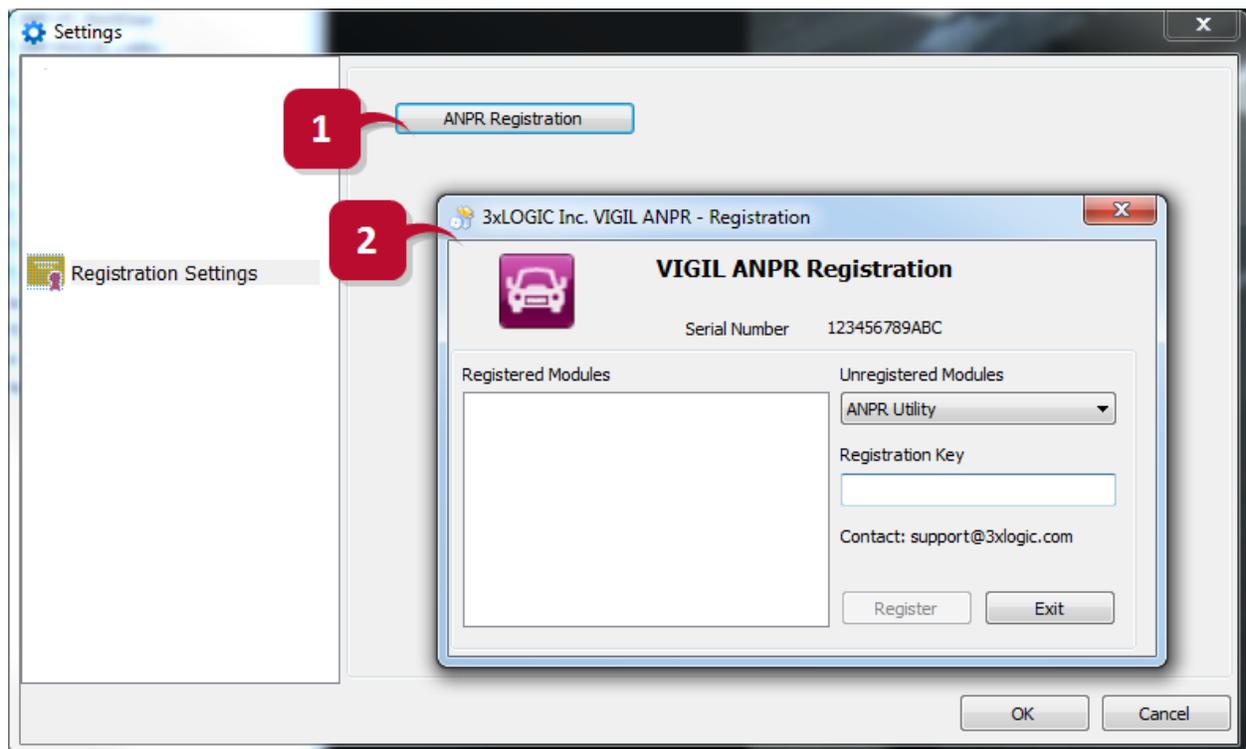


**Figure 3-10:**VIGIL ANPR Utility - Settings - Registration Settings

1. **ANPR Registration** – Click this button to open the VIGIL ANPR Registration window.
2. **ANPR Registration Window** – From the VIGIL ANPR Utility Registration Window, a user may enter their ANPR Utility registration key (obtained via 3xLOGIC WebReg) and register the utility.

## 4 Alarms

Click the *Alarm* button in the icon menu to open the below-pictured Alarms Window. Number/license plates recorded by the ANPR Utility belonging to a License Plate Hot List will be displayed here for quick retrieval and review.

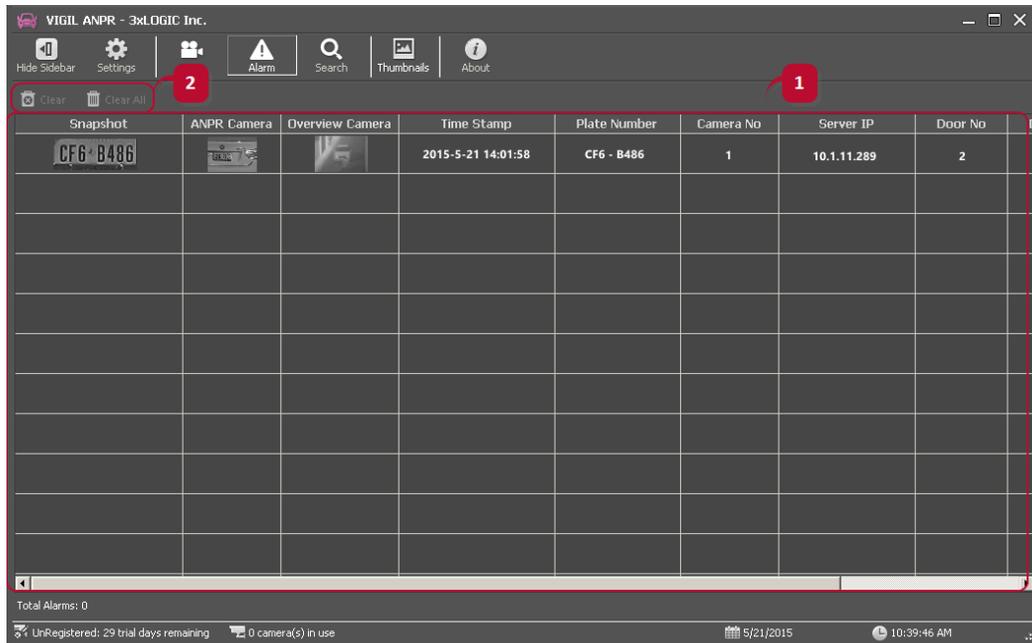

**Figure 4-1:**VIGIL ANPR Utility - Alarms Window

1. **ANPR Alarm Events List** - All plates recorded belonging to a license hot list will be displayed here.
2. **Clear/Clear All** - Select *Clear* to clear the currently selected alarm event or select *Clear All* to clear all listed events.

## 5 Search

To open the Search window, select the *Search* icon from the Icon Menu Toolbar.


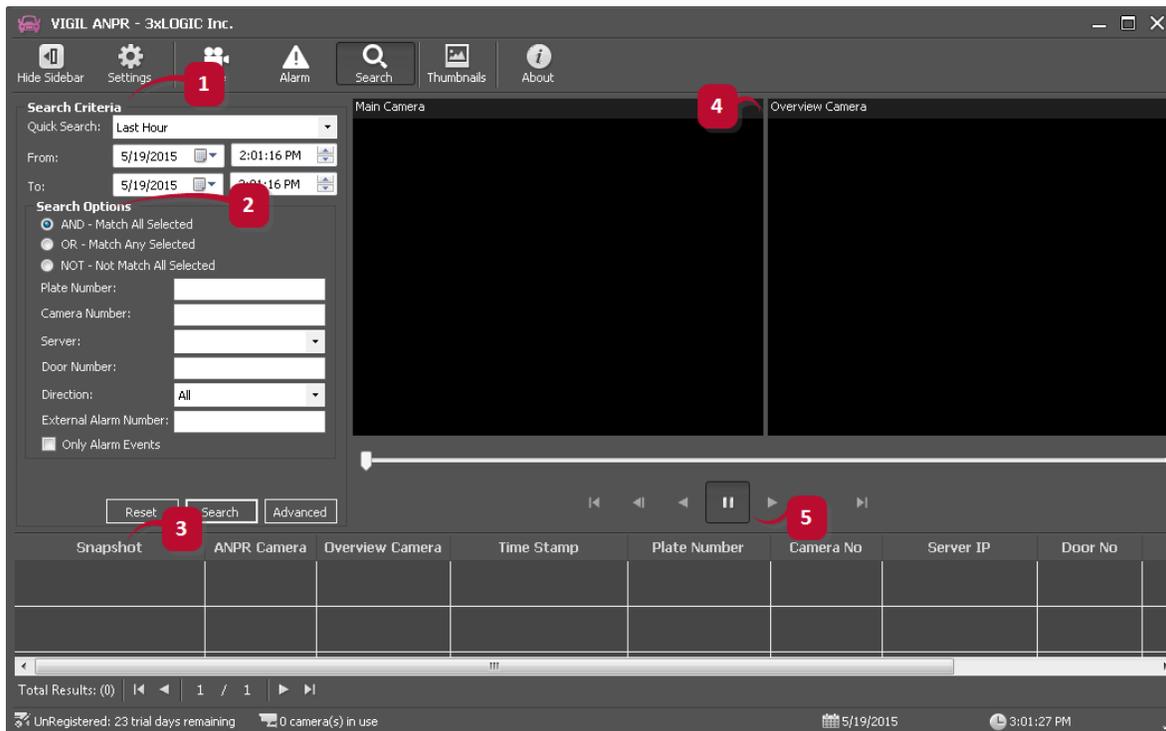


Figure 5-1:VIGIL ANPR Utility - Search Window

1. **Search Criteria** - Enter the criteria for your search.
  - **Quick Search** - Select a pre-defined time frame for your search. Options include the last 1, 2, 4, 8, 12, 48 Hours as well as a *Last Week* option.
  - **To/From** - Manually define the search time-frame.
2. **Search Options** - Define the search parameters listed below.
  - **AND/OR/NOT** - Choose a logical operator for your search. *AND* will returns results matching all defined parameters. *OR* will return results matching one or more of the defined parameters. *NOT* will returns all results which contain NONE of the defined parameters.
  - **Plate Number** - Define a specific plate number as a search parameter.
  - **Camera Number** - Define a specific camera as a search parameter.
  - **Server** - Define a specific VIGIL Server as a search parameter.
  - **Door Number** - Specify a door number as a search parameter.
  - **Direction** - Specify a direction as a search parameter.
  - **External Alarm Number** - Specify an external alarm number as a search parameter.
  - **Only Alarm Events** - Select this option to return only data associated with an alarm event.
3. **Search Results** - All search results will be compiled here in list format.
4. **Playback Viewing Area** - Playback from the associated ANPR and Overview cameras for the selected search result will be visible in this area.
5. **Playback Controls** - Standard controls for viewing and navigating playback footage.

## 6 Thumbnails

Click the Thumbnails button in the Icon Menu Toolbar to open the below-pictured ANPR Thumbnail Browser.

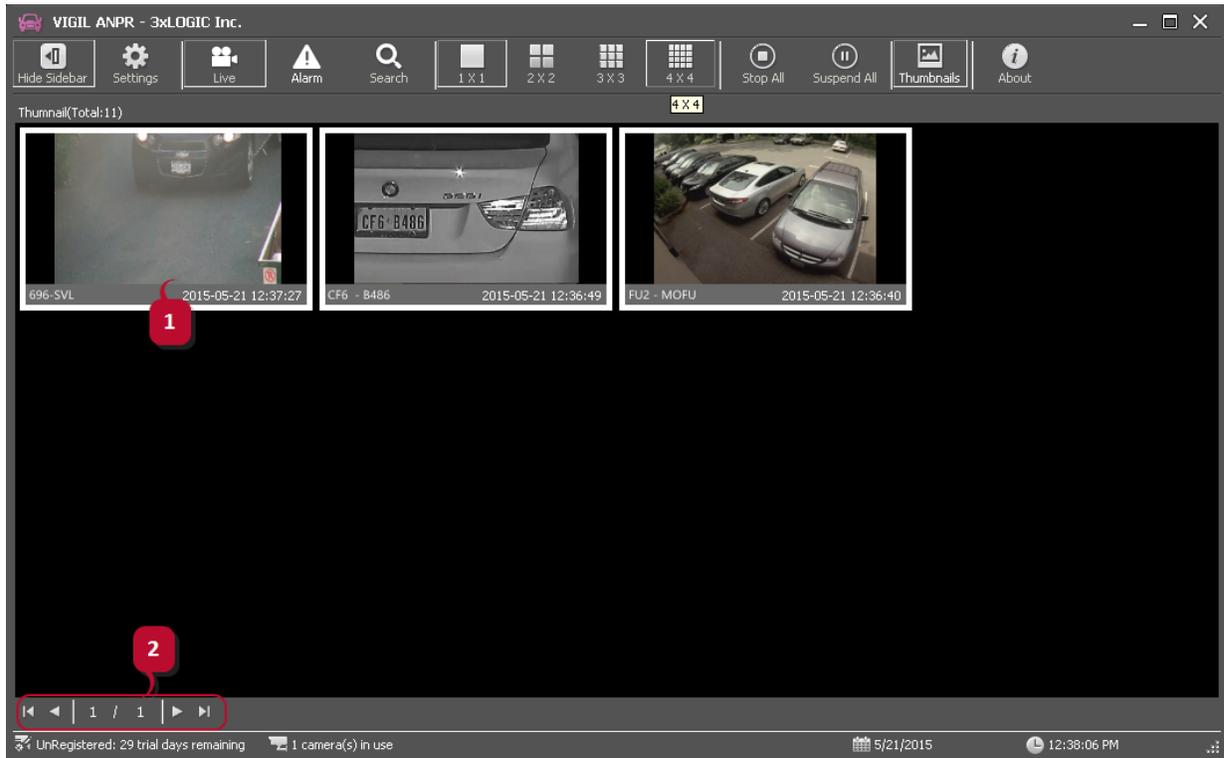

**Figure 6-1:**VIGIL ANPR Utility - Thumbnail Browser

1. **Thumbnail Browser** - Thumbnails captured by the ANPR Utility will be displayed here.
2. **Thumbnail Browser Page Controls** - When multiple pages of thumbnails are returned, use these controls to navigate to the next/previous page.

## 7 VIGIL ANPR Utility - Successful Application - Example

After adding a camera(s) and configuring ANPR settings, the camera live view will display as pictured below. Both ANPR and overview cameras can be added to live view from the camera list via drag-and-drop . When a plate is captured and data is recorded (an ANPR Event), the plate data is listed in the ANPR Event list.

The screenshot displays the VIGIL ANPR Utility interface. The top menu includes options like Hide Sidebar, Settings, Live, Alarm, Search, and camera grid layouts (1x1, 2x2, 3x3, 4x4). The main area shows two camera feeds: 'ANPR Cam:2MP-VD(Backdoors)[10.1.1]' showing a car's rear with license plate 'CF6-B486', and 'Overview Cam:Cam29[127.0.0.1-29]' showing a wide-angle view of a parking area. Below the feeds is a table of recorded events.

Snapshot	ANPR Camera	Overview Camera	Time Stamp	Plate Number	Camera No	Server IP	Door No
			2015-05-22 10:10:00	CF6B486	1	10.1.11.90	1

The bottom status bar shows 'UnRegistered: 28 trial days remaining', '1 camera(s) in use', the date '5/22/2015', and the time '10:10:07 AM'.

**Figure 7-1:**VIGIL ANPR Utility - Successful Application - Example

If you are receiving live footage from configured cameras and plate numbers are being successfully recorded and displayed in the ANPR Event list, then you have successfully configured the VIGIL ANPR Utility.

## 8 Integration with VIGIL Server and Client

Although VIGIL ANPR Utility is a standalone application, some of its components have been engineered with full VIGIL system integration in mind.

Integration with VIGIL POS (VPOS) allows for real-time OSD (On-Screen Display) of plate data in VIGIL Client via the VIGIL Server service, while the ANPR's ability to utilize the VIGIL suite's *Relay/DIO/Alarm* feature set adds yet another layer of depth, functionality and customization to your VIGIL surveillance network.

### 8.1 Utilizing VIGIL Alarms/Relays

If desired, the VIGIL ANPR Utility can be configured to trigger an alarm in VIGIL Server. This alarm could trigger recording on a defined number of camera and/or can be configured to trigger another relay which could potentially result in any number of desired outputs.



**Example:** An ANPR Camera and three standard IP cameras overlook a section of road/parking lot. When the ANPR Camera records a plate, the VIGIL ANPR utility can be configured to trigger an alarm in Server which in turn could be configured to trigger recording on the other 3 cameras. VIGIL could also be configured to have this external alarm trigger a DIO which can result in any number of outputs (open a parking garage gate, raise a security barrier, etc...).

### 8.1.1 Configuring AUX Device Settings in VIGIL Server

The first step in configuring Relays for use with the VIGIL ANPR utility is to configure VIGIL Server's AUX Device settings so that it may communicate with VIGIL ANPR (which acts as a standalone utility.)

To open VIGIL Server's *AUX Device Settings*:

1. Select *Advanced Settings* by right-clicking the VIGIL Server Icon in the Windows Quick tray. Logging in to the VIGIL Server may be required.
2. When the *Advanced Settings* form deploys, select the *Server Settings* tab.
3. Select *AUX Device Settings*.
4. Select *Add*.



**Figure 8-1:**Configuring VIGIL Relays for use with ANPR Utility- Configuring AUX Settings in VIGIL Server


5. In the Add/Edit DIO Device window, select *External Alarm* in the Type drop-down menu.
6. The DI Number field will set the amount of digital relay inputs in VIGIL Server that will be reserved for VIGIL ANPR Utility.

Click *OK* on all windows to save the new settings.

## 8.1.2 Configuring Relay Settings in VIGIL ANPR Utility

Now that you have configured VIGIL Server to communicate with the VIGIL ANPR Utility, the ANPR utility must also be configured to locate and communicate with the desired VIGIL Server.

From the VIGIL ANPR Utility interface:

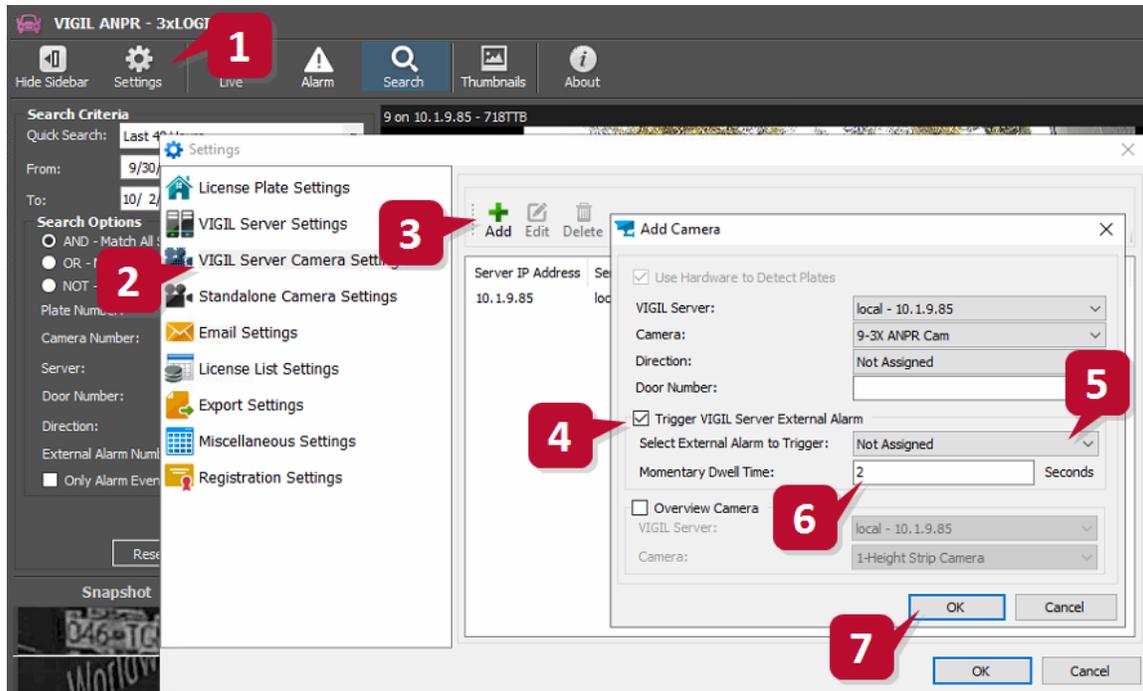

**Figure 8-2:**Configuring VIGIL Relays for use with ANPR Utility- Configuring Relay Settings in VIGIL Server


1. Click *Settings*.
2. Select the *Camera Settings* tab.
3. Select *Add* (or *Edit* if the desired ANPR Camera has already been added to the utility.)
4. Enable the *Trigger VIGIL Server External Alarm* option.
5. Select an alarm to trigger on the associated VIGIL Server.
6. Set a *Momentary Dwell Time* (the amount of time the alarm will remain in a triggered state.)
7. Click *OK* to save the new settings.

### 8.1.3 Configuring Relay Settings in VIGIL Server

After configuring the *AUX Settings* in VIGIL Server, the *Relays/Alarms Settings* must also be configured. This step will essentially assign the relay to a defined set of cameras which will begin recording whenever the relay is triggered.

To configure the *Relays / Alarms Settings* for use with the VIGIL ANPR Utility:

1. Open the VIGIL Server *Advanced Settings* via right-clicking the VIGIL Server service icon in the Windows Quick tray and selecting *Advanced Settings*. You may be required to login to the VIGIL Server. The settings form will deploy as pictured below.

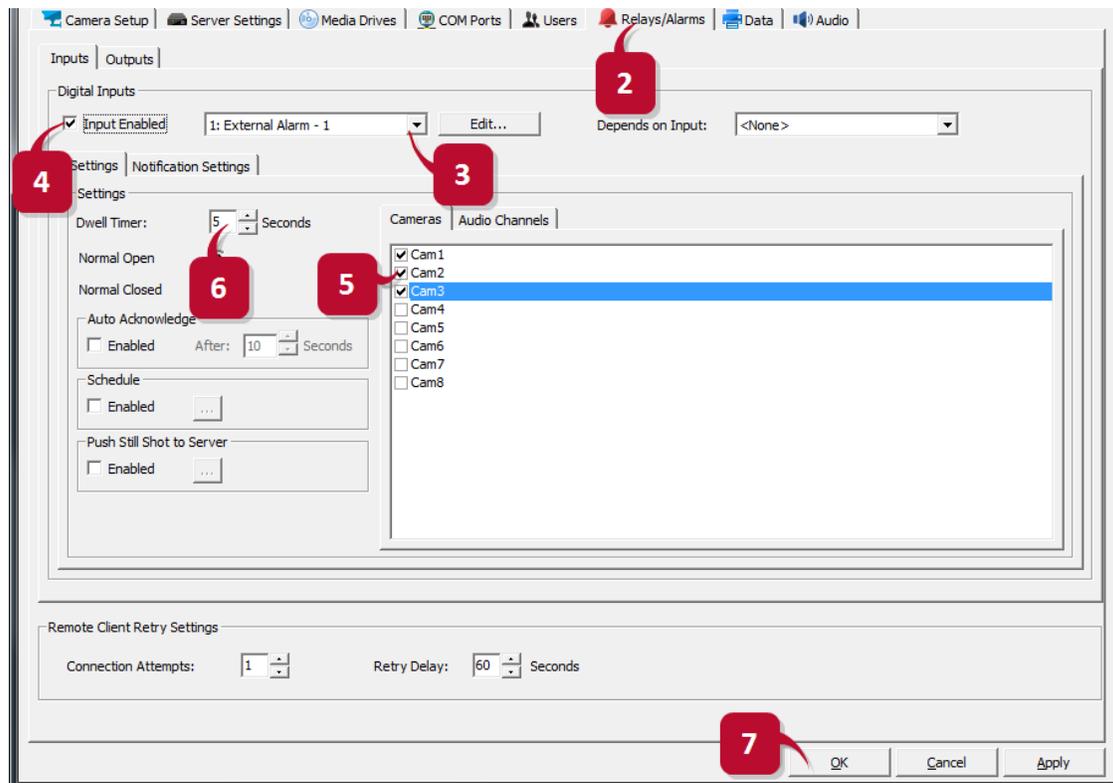

**Figure 8-3:**Configuring VIGIL Relays for use with ANPR Utility - Configuring Relay Settings in VIGIL Server

2. Select the *Relays/Alarms* tab.
3. Select the *Input Number* you wish to assign to the cameras. Be sure to use one of the input numbers you configured previously in the VIGIL Server *AUX Settings*( [See "Configuring AUX Device Settings in VIGIL Server" on page 18](#) for more info).
4. Check off the *Input Enabled* checkbox.
5. Under the *Cameras* tab, check off any cameras you wish to be associated with this *Relay / Input*.
6. Set a *Dwell Timer* value (in seconds).



**Note:**The *Dwell Timer* value plus the *Momentary Dwell Time* value configured in the [See "Configuring Relay Settings in VIGIL ANPR Utility" on the previous page](#) will give you the total duration (in seconds) for which the selected cameras will record when the relay is triggered/input is received.

7. Click *OK* or *Apply* to save the newly configured settings.


## 8.2 Configuring VIGIL Server POS OSD to Display ANPR Data

If desired, VIGIL Client ) can be configured to display plate data from the VIGIL ANPR Utility using the VIGIL Server Service's POS On-Screen Display functionality. Follow the steps in the proceeding sub-sections to configure VIGIL to display ANPR data via OSD.

### 8.2.1 Enabling Data Insertion Into the VIGIL Server Database

In order to enable OSD (on-screen display) of ANPR number plate data, the VIGIL ANPR Utility must be configured to insert data it records directly into the VIGIL Server database.

To enable data insertion:

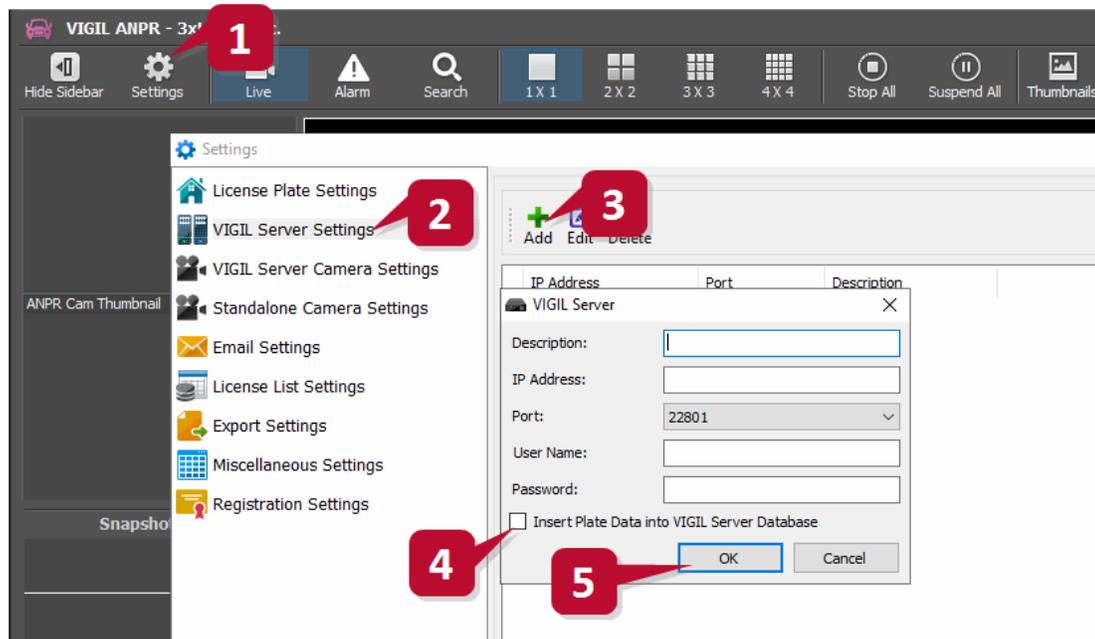

**Figure 8-4:**Configuring VIGIL POS OSD to Display ANPR Data - Enabling Data Insertion into VIGIL Database


1. From the VIGIL ANPR Utility interface, click the *Settings* button.
2. Select *VIGIL Server Settings* tab from the side menu.
3. Add/Edit a Server.
4. On the VIGIL Server Settings form for the chosen Server, enable the *Insert Plate Data Into VIGIL Server Database* option.
5. Click OK to save the new settings.

## 8.2.2 Configuring OSD Settings in VIGIL Server

After configuring the VIGIL ANPR Utility to insert data into the VIGIL Server database, VIGIL Server itself must be configured to receive the data and make it available for display.

To configure the VIGIL Server Settings for on-screen display of the ANPR plate data:

1. Open the VIGIL Server *Advanced Settings* via right-clicking the VIGIL Server service icon in the Windows Quick tray and selecting *Advanced Settings*. You may be required to login to the VIGIL Server. The settings form will deploy as pictured below.

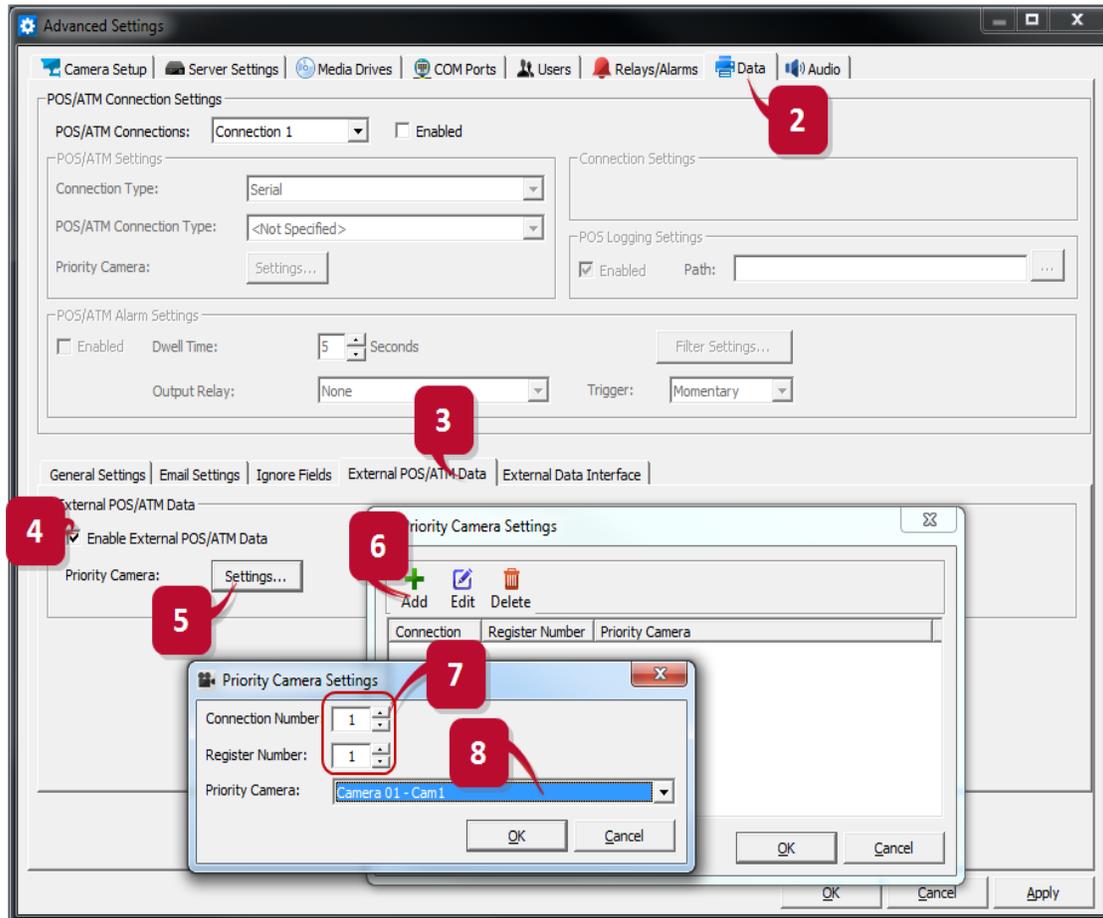

**Figure 8-5:**Configuring VIGIL POS OSD to Display ANPR Data - Configuring OSD Settings in VIGIL Server

2. Click the *Data* tab.
3. Click the *External POS/ATM Data* tab.
4. Check off the *Enable External POS/ATM Data* option.
5. Click the *Priority Camera Settings* button.
6. Click *Add*.
7. In the *Connection Number* and *Register Number* fields, enter the VIGIL Server camera number of the ANPR camera/camera being used to record plate data.
8. Select the desired *Priority Camera*(the camera stream which will feature OSD of the plate data in VIGIL.)



**Example:** If the ANPR camera being used to record plate data is Camera 1 in VIGIL Server, set the *Connection Number* and *Register Number* fields to 1. The *Priority Camera*(the camera on which the OSD data will be visible) can be any relevant camera of your choosing.

### 8.2.3 Viewing ANPR Data OSD

After configuring both VIGIL Server and the VIGIL ANPR Utility, enable OSD on the *Priority Camera* you selected in the previous section in either VIGIL Client begin the on-screen display of ANPR data (example pictured below.)

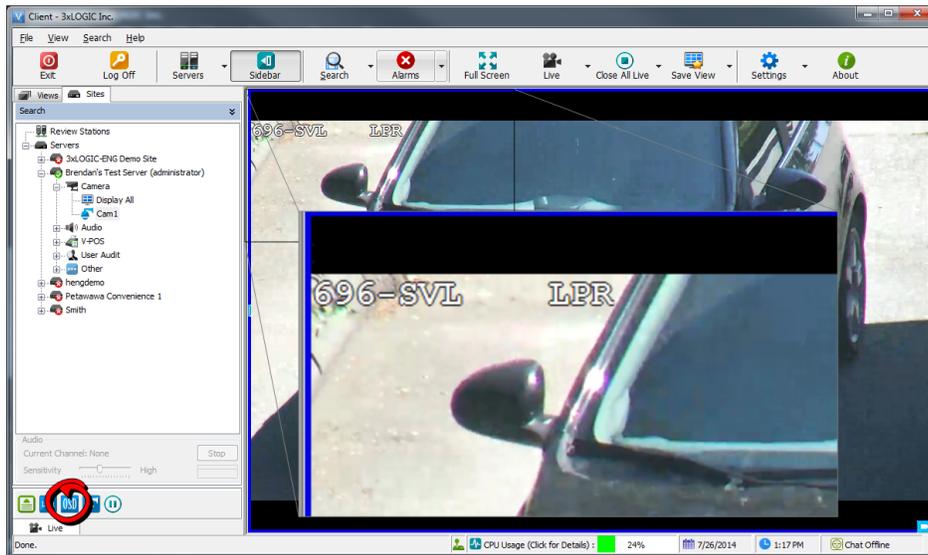


Figure 8-6: Viewing ANPR OSD in VIGIL Client

When using VIGIL Client, you may configure the appearance of the on-screen display data by clicking the *OSD* button (circled in red, above) and adjusting column positioning, select visible headers and more, to best suit your application of the ANPR Utility.

OSD data will also be visible in the VIGIL ANPR's *Live Viewer* (pictured below.)



Figure 8-7: Viewing ANPR OSD in the VIGIL ANPR Utility

## 9 Version Control

Version Number/Date	Notes
1.0.0 - June 27th, 2014	<ul style="list-style-type: none"> <li>Initial Release of User Guide as Document 140038.</li> </ul>
1.1.0 - July 26th, 2014	<ul style="list-style-type: none"> <li>Templated content with "VIGIL Core Software User Guide" Template.</li> <li>Documented "Burn In License Location Indicator" Feature.</li> </ul>
2.0.0 - April 22nd, 2016	<ul style="list-style-type: none"> <li>Rebranded and reformatted to meet new corporate branding guidelines.</li> <li>Documented changes to main UI.</li> </ul>
2.0.1 - May 22nd, 2016	<ul style="list-style-type: none"> <li>Added Search, Alarm, Thumbnails, Misc, Email and License List Settings sections in preparation for v8 release.</li> </ul>
2.5.0 - October 23rd, 2016	<ul style="list-style-type: none"> <li>Updated software version numbers across guide to reflect VIGIL 8.5 release.</li> </ul>
3.0.0 - April 8th, 2016	<ul style="list-style-type: none"> <li>Updated for VIGIL 9.</li> </ul>
4.0.0 - Oct 28th, 2016	<ul style="list-style-type: none"> <li>Updated for VIGIL 9.5</li> </ul>
5.0.0 - June 15th, 2017	<ul style="list-style-type: none"> <li>Updated for VIGIL 10</li> </ul>
6.0.0 - March 14th, 2019	<ul style="list-style-type: none"> <li>Updated for VIGIL 10.5</li> <li>Added Auto License List Import fields to License List Settings</li> <li>Added Use Hardware to Detect Plates feature to Camera Settings</li> <li>Added Show License Location Indicator on Thumbnail settings to Misc Settings</li> </ul>
6.0.1 - June 6th, 2019	<ul style="list-style-type: none"> <li>Updated for VIGIL 10.50.0400</li> </ul>
7.0.0 - September 23rd, 2019	<ul style="list-style-type: none"> <li>Updated for VIGIL 11.00.0000</li> </ul>
8.0.0 September 17th, 2020	<ul style="list-style-type: none"> <li>Updated for VIGIL 11.50.0000</li> <li>Added Standalone Camera Settings menu.</li> </ul>
9.0.0 - April 19th, 2021	

## 10 Contact Information

3xLOGIC has offices in Victoria BC, Canada and in Fishers, Indiana, USA. Please visit our 3xLOGIC web site at [www.3xlogic.com](http://www.3xlogic.com). Please contact us by e-mail at [helpdesk@3xlogic.com](mailto:helpdesk@3xlogic.com) (technical support), or using the following contact information:

### 3xLOGIC Technical Support:

Toll Free:(877) 3XLOGIC

(877) 395-6442

Email:[helpdesk@3xlogic.com](mailto:helpdesk@3xlogic.com)

Website:[www.3xlogic.com](http://www.3xlogic.com)

### 3xLOGIC USA Main Office:

11899 Exit 5 Parkway, Suite 100

Fishers, IN 46037

United States. (303) 430-1969

# 3xLOGIC VIGIL

Simple. Scalable. Secure.