

IntelliM

Technical Support Center

Changing Time/Date in Web Mode

Written By: Barry Slinker Rev: Oct 9th, 2009

1. Enter the IP address in your web browser to access the infinias start screen



2. Log into the controller with your credentials.



3. Click Control Panel

Event Monitoring						
Card Holders System	Search	Help Control Panel Alarms				
When	Where	What Who				

4. Click Network Status

Control Panel - Service Status								
Access	Alarm]			Events Network Sta			
Address		Description	Door Status	Lock Status	Command Mode			
1.300.0	Access Se	rvice #1	Closed	Locked	Schedule(Locked)			

5. Click Date and Time

			Contro	ol Panel - I	Network Status	;				
Controllers	Inputs O	utputs						(Events	Service Stat
Address	Description	Line Status	Serial	Board	30f Firmware	Board	18f Firmware		Web Revision	Mode
eIDC 1.300.0	eIDC 300	Online	25412	2.001	2.172	2.001	2.042	1.103		Web
,										
\int										
Date & Time										
				_						
				н	elp					

6. Click Sync to PC Time switch Daylight Savings Time to Observe On. Fill in the boxes for the DST info and

7177	2 1001	/1	147			
Set Date & Time						
Date		Time				
10/9/2009		10:47				
Time Zone						
GMT - 5 hours	-	Sync to	PC Time			
			•			
Daylight Savings T	Time		\mathcal{A}			
Observe On 🔻						
DST starts on the	First 🔹	Sunday	▼ of April	-		
DST ends on the	Third 🔫	Sunday	▼ of October	-		
ОК			Cancel			

7. Setting the Date/Time is complete.